



Smartlab

Maximize Your Business Opportunity

Ideal Printer for KIOSK System, Minilab, or Event Photography



Small High Quality Frontier Inkjet Printer using 6 colored inks



Flexible system configuration to meet budget and customers needs




Versatile Printing Sizes accommodate various demand of customers

Space Saving Design and Easy maintenance

Flexible system configuration respond various demand of customers

System configuration case

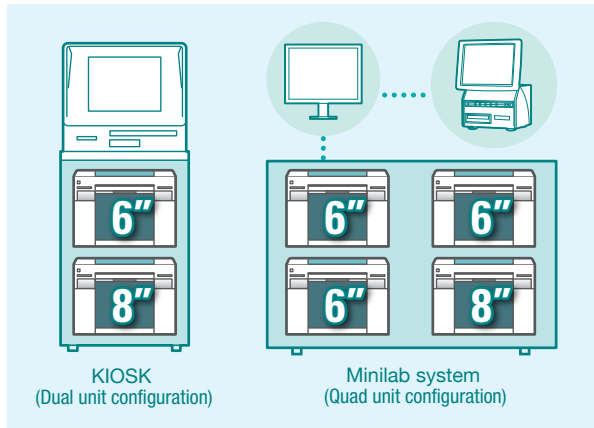

Multiple printer and software configurations enables the establishment of a flexible business configuration. Flexible functionality and competitive cost helps maximizes business opportunity.

High processing capacity

Approx 360 sheets/hr (4"×6") can be processed.

*average print speed 10 seconds per sheet

Approx
360 (4"×6")
sheets/hr

use 2 units

Approx
720 (4"×6")
sheets/hr

use 4 units

Approx
1,440 (4"×6")
sheets/hr

*Processing capacity will vary depending on system configuration and so on.

High Quality and Versatile Printing Service

Newly developed 6 colored unique "VIVIDIA" dye inks for beautiful reproductions

The newly developed "VIVIDIA" ink system which uses a unique colorant that is light and Ozone resistant. "VIVIDIA" ink system realizes enhanced granularity and gradation, producing remarkable improvements in medium density areas such as skin tones, blue skies, gradient backgrounds.

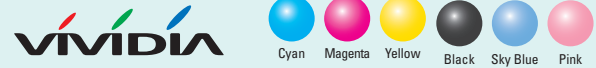


Image Intelligence™ — FUJIFILM's Superior Image processing

FUJIFILM's proprietary image processing technology, Image Intelligence™ automatically compensates for problematic conditions, such as poor lighting, excessive backlight, high contrast, underexposure or overexposure.



Superior image quality using exclusive paper

"FUJIFILM Quality Dry Photo Paper" enhances the overall color saturation to produce vivid color.

Supported various paper size and paper type

The Frontier-S supports a variety of paper sizes up to 8"×39" (203×1,000mm) and two paper types Glossy / Luster




←..... Maximum length 1,000mm→

Exceptional space saving and Easy maintenance

Minimum of shop space required

required footprint is only 2.23 Ft² (0.19m²).

0.19m²

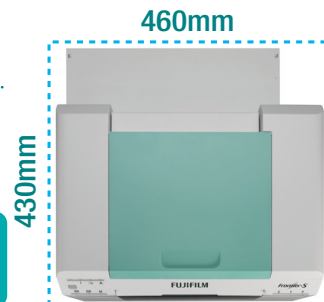

Easy maintenance

Ink cartridges and roll paper are replaced easily just by opening the front covers to replace them.



Frontier-S DX100 Main specifications

Print method	Piezoelectric inkjet system	Paper loading	1 roll paper feeder
Print size	(5"×3.5") 127×89mm to 203×1,000mm	Paper type	Glossy / Luster
Print speed	10 seconds per 1 sheet (4"×6"), *standard mode	Ink cartridges	6 Colors (C, M, Y, K, SB, P) of dye based ink (Volume : 200ml per color)
Print resolution	Standard mode 720×720dpi	Power requirements	100v ~ 220V (50/60Hz) single-phase two-wire
Roll paper	Paper Length : 65m (213") Width : 127mm (5"), 152mm (6"), 203mm (8")	Weight	Approx. 23kg 51lbs

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

Ref. No. LB-1301E (SK-13-10-F43TB) ©2013 FUJIFILM Corporation