



Elevating your photo print business





Evolve to Satisfy Business Needs

Flexible System Configuration for Diverse **Customer Applications**

To fit your business needs, the most effective system can be configured by combining up to four or more Frontier DE100s along with software and optional equipment.



Self-printing system (Dual-unit configuration)

A wide variety of paper surfaces and sizes that can never be offered by a dve-sublimation printers



Small investment delivers the same superior processing capacity of inkjet minilab



Event photo system

Compact and easy to carry, vet offering high quality images



In case of Quad-unit

Evolve to Fulfill Quality Requirements

Smooth and Sharp Print Image Quality

The Frontier DE100 uses 4 inks, which produce beautiful prints with exceptional granularity and sharpness resulting complete customer satisfaction.





Optimized image after image processing

General inkjet printer (6-color inks)

Fujifilm's proprietary technology

Image Intelligence™ automatically compensates for problematic conditions such as poor lighting,

excessive backlight, high contrast, underexposure and overexposure

- to produce beautiful images.


Fujifilm's Superior Image Processing Image

DE100

placement of ink droplets Combining ViViDiA D-photo high viscosity 4-color inks

developed with our proprietary technology and a high resolution $(1,200 \times 1,200 \text{ dpi})$ printhead facilitates precise jetting of 1-picoliter ink droplets on photo paper. Sharp images are created by preventing misaligned jetting, which can produce a rough print surface and ink deformation.

Highest Quality with most precise

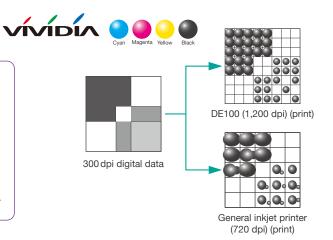

Evolve to Meet Consumer Trends

Expand revenue and meet customer trends with surface flexibility and high quality thickness

Unlike dye-sublimation printers limited to standard paper sizes, the Frontier DE100 supports a variety of paper sizes ($89 \times 50 \text{ mm} - 210 \times 1,000 \text{ mm}$), including square prints that have been popularized by smart phone apps, wallet prints, and banner prints for room decorations.

A variety of Paper Surfaces Supports Glossy, Luster and Silk.

Other paper surfaces will soon be supported to realize much wider range of print products.





89 / 102 / 127 / 152 / 203 / 210 Paper length (mm) 50 - 1,000






Saving space and time, boosting business efficiency

Saves Space

Compact Size

With a required footprint of only 0.21 m², the printer can be installed in small spaces.



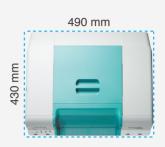

Saves Time

Let your staff focus on selling with less frequency changes and simple maintenance

Easy Maintenance

Simply open the front cover to replace ink cartridges or paper roll.








scrap paper Replace a paper

Replace a paper roll

Replace an ink cartridge

Reducing Consumable Replacement The frequency of consumable The frequency of consumable The frequency of consumable The frequency of consumable


replacement is reduced by the high viscosity ink which increases the number of photo prints per cartridge to 1.9 times.

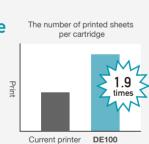

☐ Frontier DE100 Main Specifications

Print mode	Standard mode/High Quality mode
Print method	Piezoelectric inkjet system
Print size	89 × 50 mm – 210 × 1,000 mm
Print speed	10.8 sec./sheet (4"× 6") / Standard mode
Print resolution	$1,200 \times 1,200$ dpi / Standard mode $2,400 \times 2,400$ dpi / High Quality mode
Paper loading	1 roll
Paper types	Glossy, Luster and Silk
Ink cartridges	4 colors (C, M, Y, K) of dye-based ink (volume: 200 ml per color)
Footprint	Approx. 0.21 m ²
Power requirements	AC100V-120V, 50/60Hz, 6.0A AC220V-240V, 50/60Hz, 3.0A
Dimensions (mm)	W490 × D430 × H354
Weight	Approx. 26.5 kg (not including paper and ink cartridges)

^{*}Specifications are subject to change without notice.

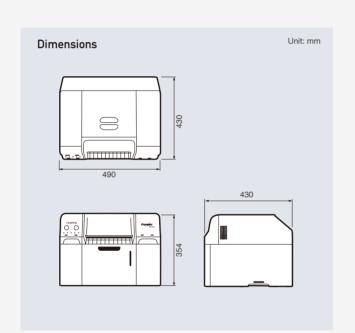

Consumables

Special Paper for High Quality Prints
Fujifilm Quality Dry Photo Paper



		65 m rolls		Dalla nas Day
	Glossy	Luster	Silk	Rolls per Box
89 mm	0	0	_	2 rolls
102 mm	0	0	_	2 rolls
127 mm	0	0	0	2 rolls
152 mm	0	0	0	2 rolls
203 mm	0	0	0	2 rolls
210 mm	0	0	-	2 rolls

Fujifilm's Proprietary High Viscosity Inks Fujifilm DE Ink Cartridge



Color Black Cyan
Cyan
Oyan
Magenta
Yellow



FUJIFILM Corporation
7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN





Elevating your photo print business

